

Installation Instructions for the Sleeve Sentry:



Note: if there is an air conditioner in the sleeve it must be removed prior to the installation.

1. Hold the Sleeve Sentry by the handles as shown in the picture above. Slide the Sleeve Sentry into the sleeve and stand the Sleeve Sentry upright to cover the entire sleeve.
2. Slide the Sleeve Sentry to the back of the sleeve so that it seals the entire opening at the back of the sleeve.
3. Run your finger along the perimeter of the gasket to assure that the gasket is sealing the entire perimeter of the sleeve.
4. Inspect the installation to make sure that no light is visible around the perimeter of the Sleeve Sentry where it comes in contact with the sleeve.

Removal of the Sleeve Sentry:

1. Pull on the handles of the Sleeve Sentry
2. While pulling on the handles provide pressure on the top of the Sleeve Sentry to push the top of the Sleeve Sentry towards the back of the sleeve. This will force the bottom of the Sleeve Sentry to come towards you.
3. Pull either side of the Sleeve Sentry on the angle in the picture above and remove from the Sleeve.